

V8

No.	OPERATION	STUDEBAKER				SUNBEAM				TOYOTA			
		V-8 1957-1958		HAWK & LARK 1959-1964		RAPIER 1959-1964		ALPINE 1960-1964		TIARA P.T. 36 1964		TIARA R.T. 20 1964	
		Hrs.	Price \$	Hrs.	Price \$	Hrs.	Price \$	Hrs.	Price \$	Hrs.	Price \$	Hrs.	Price \$
<b>COOLING SYSTEM</b>													
36.	Water Pump, Overhaul one	2½	8.20	2¼	7.38	2	6.56	2	6.56	1¾	5.74	2¼	7.38
37.	Water Pump, Renew	1¾	5.74	1¾	5.74	1½	4.92	1½	4.92	1¾	4.10	1¾	5.74
38.	Fan Belt, Renew One	1	3.28	1	3.28	½	1.64	½	1.64	½	1.64	½	1.64
39.	Thermostat, Renew One	¾	2.46	¾	2.46	½	1.64	½	1.64	½	1.64	½	1.64
40.	Radiator, Remove and Replace or Renew	2½	8.20	2¼	7.38	¾	2.46	1	3.28	1	3.28	1	3.28
41.	Radiator and Grill, Remove and Replace	8	26.24	—	—	—	—	—	—	1½	4.92	1½	4.92
42.	Radiator Grill, Remove and Replace	5½	18.04	1	3.28	—	—	—	—	½	1.64	½	1.64
<b>ELECTRICAL SYSTEM</b>													
43.	Distributor, Overhaul and Retime	3	9.84	2¼	7.38	2	6.56	2	6.56	2	6.56	2	6.56
44.	Ammeter, Remove and Replace	¾	2.46	1½	4.92	—	—	—	—	—	—	—	—
45.	Starter Bendix Spring, Renew	1½	4.92	1½	4.92	—	—	—	—	1	3.28	1	3.28
46.	Starter, Remove and Replace	1	3.28	1	3.28	3	9.84	3	9.84	1	3.28	1	3.28
47.	Starter Commutator, Machine and Fit Brushes	3	9.84	3	9.84	4	13.12	4	13.12	2½	8.20	2½	8.20
48.	Generator, Remove and Replace	1	3.28	1½	4.92	2	6.56	2	6.56	¾	2.46	¾	2.46
49.	Generator Brushes, Renew All	1½	4.92	2	6.56	2½	8.20	2½	8.20	1½	4.92	1½	4.92
50.	Generator Commutator, Machine and Fit Brushes	3	9.84	3	9.84	3½	11.48	3½	11.48	2¾	9.02	2¾	9.02
51.	Generator Cut-out Relay, Clean and Adjust	¾	2.46	¾	2.46	½	1.64	½	1.64	½	1.64	½	1.64
52.	Wiring Harness, Renew	7½	24.60	8½	27.88	5½	17.22	5½	18.86	5½	18.04	5½	18.04
53.	High Tension Wires, Renew All	1¾	5.74	1½	4.92	1	3.28	1	3.28	¾	2.46	¾	2.46
<b>FUEL SYSTEM</b>													
54.	Carburettor, Clean and Adjust One	2	6.56	2¼	9.02	1½	4.92	1½	4.92	1	3.28	1	3.28
55.	Carburettor, Overhaul and Adjust One	3¼	10.66	3½	11.48	2½	8.20	2½	8.20	2¼	7.38	2¼	7.38
56.	Fuel Pump, Remove and Replace One	1¼	4.10	2	6.56	1	3.28	1	3.28	¾	2.46	¾	2.46
57.	Fuel Pump, Overhaul One	1¾	5.74	2½	8.20	1½	4.92	1½	4.92	1¼	4.10	1¼	4.10
58.	Fuel Tank, Remove and Replace	2¼	7.38	2¼	7.38	1	3.28	1	3.28	2	6.56	2	6.56
59.	Fuel Gauge, Renew Tank Unit	2½	8.20	2½	8.20	1½	4.10	1½	4.10	2¼	7.38	2¼	7.38
60.	Fuel Gauge, Renew Dash Unit	1	3.28	1	3.28	1	3.28	1	3.28	1	3.28	1	3.28
<b>SILENCER</b>													
61.	Silencer, Remove, Replace or Renew One	1¾	5.74	1¾	5.74	1	3.28	1	3.28	1½	4.92	1½	4.92
62.	Silencer, Tail Pipe, Renew One	1	3.28	1¼	4.10	1	3.28	1	3.28	1	3.28	1	3.28
63.	Exhaust Pipe, Manifold End, Renew	1¼	4.10	1½	4.92	1	3.28	1	3.28	1	3.28	1	3.28
<b>SHORT MOTOR</b>													
64.	Remove Engine, Install Short Motor (for Details see Page 7)	19	62.32	20	65.60	17	55.76	17½	57.40	13½	44.28	16½	54.12
65.	Engine Mounts Front, Renew Each	1½	4.92	1½	4.92	1	3.28	1	3.28	¾	2.46	1	3.28
66.	Engine Mounts Rear, Renew Each	1½	4.92	1½	4.92	1	3.28	1	3.28	1¼	4.10	1¼	4.10
67.	Engine Mounts, Renew All	5	16.40	5	16.40	3	9.84	3	9.84	3½	11.48	3½	11.48
<b>TIMING</b>													
68.	Timing Case Cover, Remove and Replace	4	13.12	6	19.68	3	9.84	3½	11.48	2	6.56	2½	8.20
69.	Timing Chain or Gears, Renew	6½	21.32	7½	24.60	4	13.12	4½	14.76	4¾	15.58	4¼	13.94
70.	Timing Gears or Sprockets, Renew All	6	19.68	7½	24.60	4	13.12	4½	14.76	5	16.40	5	16.40